

INSTALLATION GUIDE


GVM5715
SELF SUPPORTING STAND
2015-2020 CHEVY TAHOE

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE


pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED TO INSTALL
THE PRO-GARD 4G5715 SELF SUPPORTING STAND AND TRI-LOCK GUN RACK

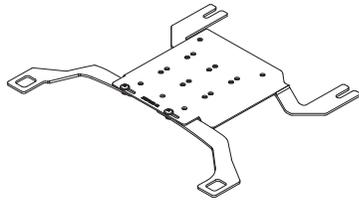

4GBK57-01 GUNRACK MOUNT BASE KIT

Tri-Lock Gun Rack
4GTLD-01

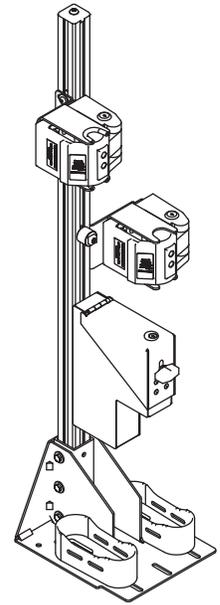

I. Refer to the diagram above to verify all parts were received.

II. The following tools will be required to complete the installation:

- | | |
|---------------------------|--------------------|
| A. 7/16" Socket & Ratchet | D. 5/16" Drill bit |
| B. 5/32" Allen Wrench | E. 18mm Socket |
| C. 9/32" Allen Wrench | F. T-45 Torx Bit |



III. Read all instructions carefully before starting the assembly process.

NOTE: *Locate all wiring, fuel lines, brake lines, and /or cooling lines before drilling holes or installing any fasteners.*

IV. Mounting Base Installation

Fig. 1

- A. Position both the driver and passenger seats as far forward and up as possible. Remove the (2) inner plastic guards located on the rear of the front seat tracks.
- B. Using a T-45 torx bit, remove the inner seat bolts located on the passenger and drivers side. (See Fig.1)
- C. Loosen the second row seat frame bolts located on the floorboard of the vehicle using a 18mm socket. Tilt the second row seats backwards slightly to allow installation of 3G5715U-01. Align the slots in the base with the inner seat bolts. (See Fig. 2)
- D. Place 3G5715U-05 under the driver's side seat track and align the slot with the hole location for the OEM bolt. Loosly secure the OEM bolt back into location. Align this bracket with 3G5715U-01. Secure using the provided 3X03 bolt and 3X12 washer. Repeat the process for the passenger side using 3G5715U-06.
- E. Ensure all bolts are tightened firmly.

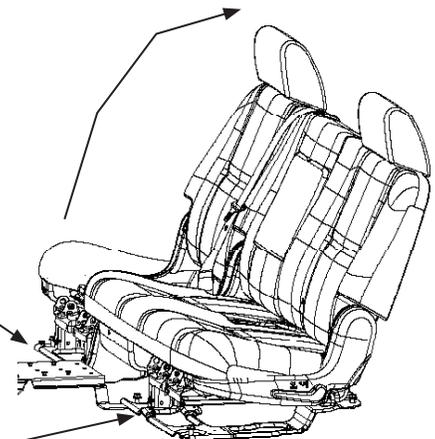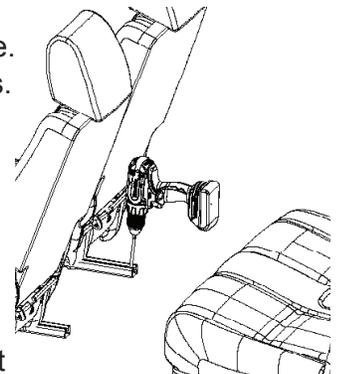


V. Base Installation Complete


(Continue with gun rack installation)

VI. Installing the Tri-Lock gun rack (Requires Pro-gard self-supporting mounting base)

- A. Place the intended guns into the gun rack and make adjustments to fit. This will allow more access than when the rack is in the vehicle, but the rack can be adjusted after installed inside the vehicle as well.
- B. The brackets mounting the gun lock are designed to be loosened and adjusted in many directions to accommodate most guns. Fit each gun by loosening the bolts on the gun lock bracketry so the mounting bracket moves freely. Place your gun into the lock and in the desired position. Use an allen wrench to tighten locks in place. (See Fig. 2)

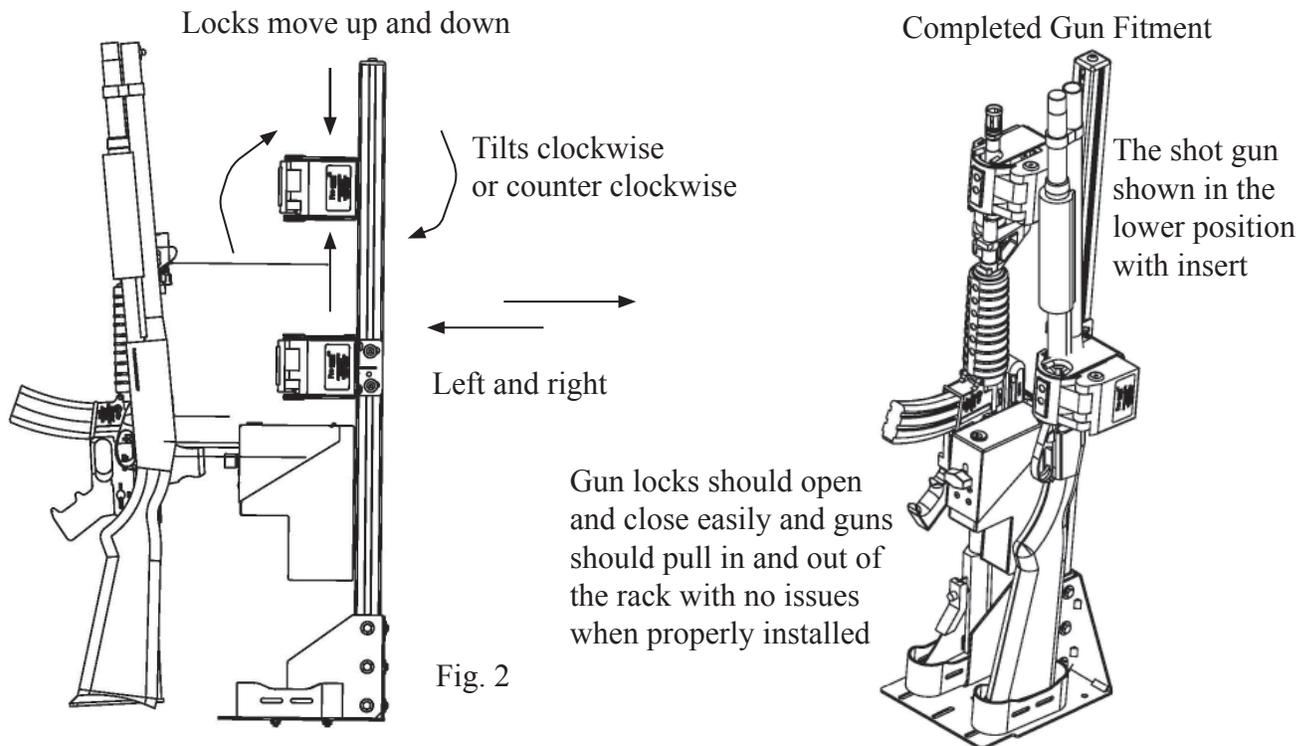

- C. Shot Gun Mounting - The shot gun can be mounted in two ways, by barrel mount or by installation of the shot gun mount insert. To install the shot gun insert, remove the standard insert by opening the lock and unscrewing the two insert bolts with an allen wrench. Remove the retaining ring from the bolt's back side. Replace with shot gun insert (3G724) and reinstall insert bolts and retaining rings on the back side of the insert. Use the two fastener bolt's adjustment to fit the shot gun used in the lock. (See Fig. 3)

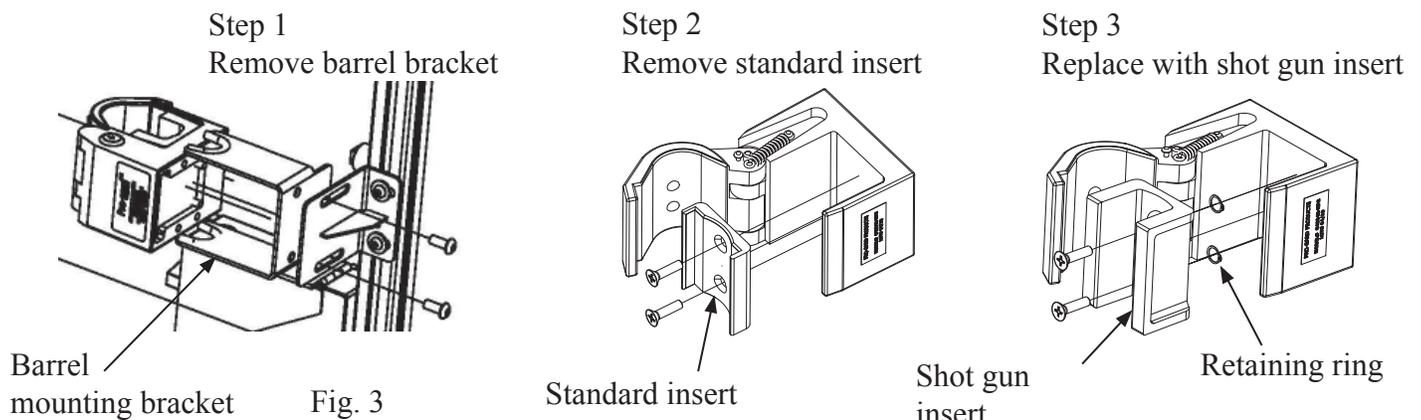

VII. Self-Supporting Installation

- A. For self-supporting installations, remove the four bolts that secure the butt plates to the base of the gun rack. Then rest the gun rack to the self supporting stand, loosely attach the gun rack and adjust it and the butt plates as necessary from front to back. (See Fig. 4)

NOTE: For Optimal Conditions secure the back of the gun rack tight against the seat.

VIII. Lock Box

- A. Open the lock box and loosen the bolts with a $7/16$ " socket and extension wrench to adjust the box up or down as needed. (Swivel attachment is required) Install supplied black felt over bolts when box position has been fixed. (See Fig. 5)

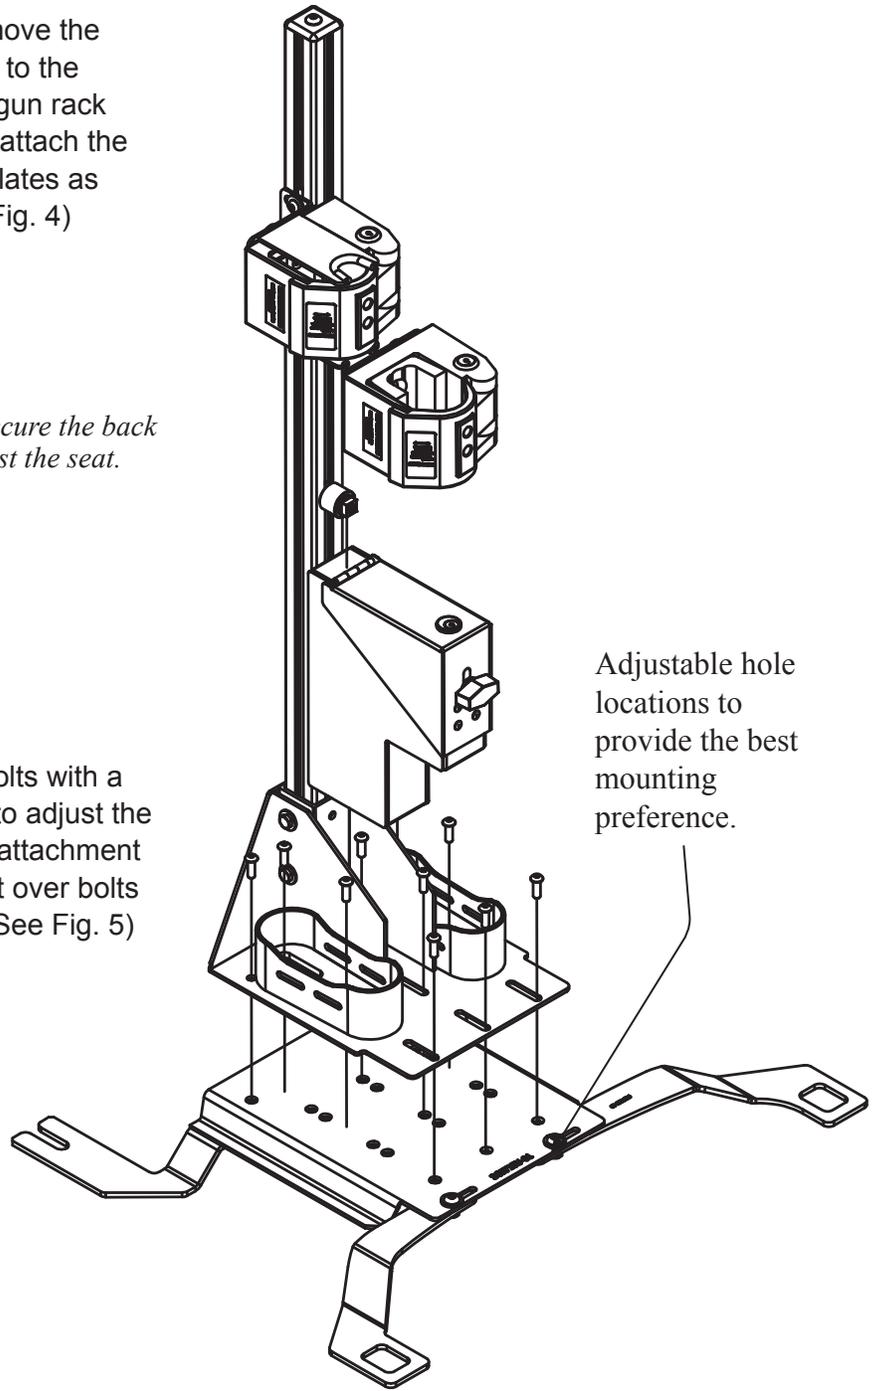


Fig. 4

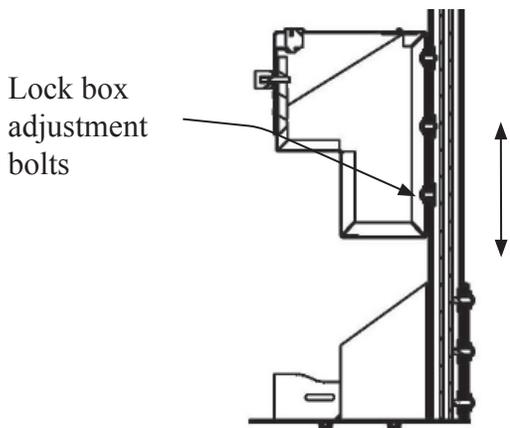


Fig. 5

IX. Gun lock switch and timer installation.

- A. We suggest mounting the momentary release button in a concealed location that can be easily reached by the officer, but would be hidden in case an unauthorized entry occurs.
- B. Connect the gun lock wiring as shown in the diagram below.

NOTE: *Pro-gard requires the use of a 10 AMP fuse between the power source and gun lock circuit or the warranty will be voided!*

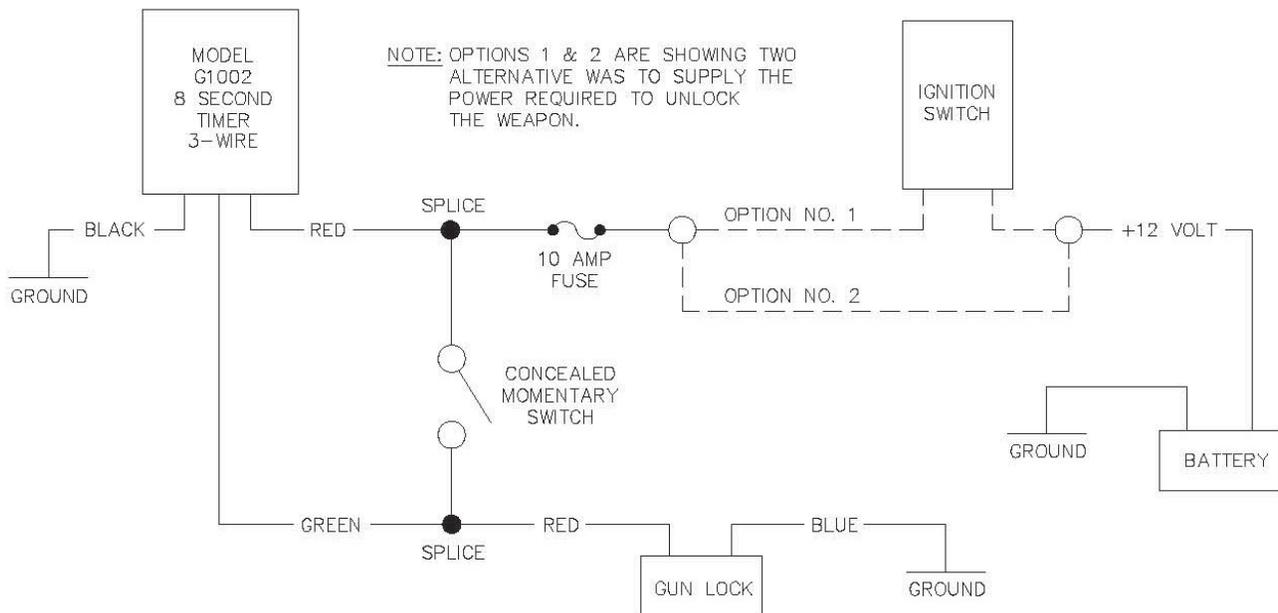


Fig. 6

X. Lock Head Operating Instructions

- A. To release, grasp the weapon, but do not pull it against the lid of the gun lock.
- B. While depressing and holding the release button (momentary switch), push and then pull the weapon towards the lid of the gun lock to release it from the lock.

NOTE: *One handed operation is possible utilizing the optional 8 second timer. The timer will unlock the lock for 8 seconds following activation of the momentary switch. If the gun is not pulled out of the lock within 8 seconds after activation of the momentary switch, the lock will automatically re-lock.*


TIP: *If lid of the lock does not release, press in on the lid to release tension and reactivate the release button (unless timer is still active).*

Installation Complete!

Call Pro-gard technical support if assistance is needed. 1-800-480-6680


Self-Supporting Mounting Base

4GBK57-01 GUNRACK BASE KIT TAH			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3G5715U-01	TRI-LOCK SELF SUPPORTING BASE
2	1	3G5715U-05	SEAT MOUNTING BRACKET - DRIVER SIDE
3	1	3G5715U-06	SEAT MOUNTING BRACKET - PASSENGER SIDE
4	2	3X03	1/4-20 X 5/8 PHIL TRUSS HD MS
5	2	3X12	1/4 FLAT WASHER, BLACK

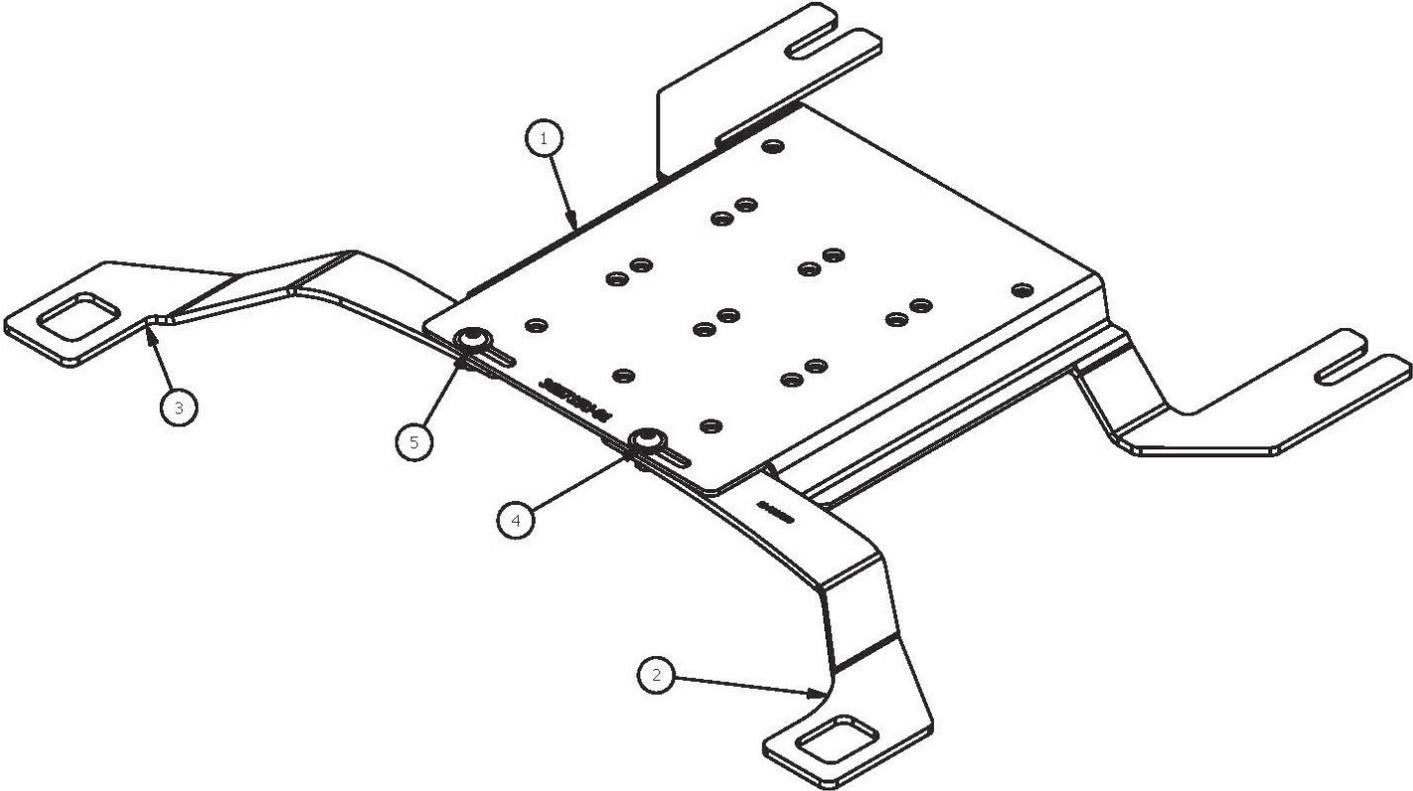

Tri-Lock Gun Rack

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1515-LTR-BLACK 80/20 INC	1.5" X 1.5" LOT T GLOTTED 36"
2	1	200883-PLAIN	END CAP W/O FASTER FLASH
3	*2	36L35	R LOCK BARREL MOUNT BRACKET
4	2	364963-002	BUTT PLATE BLACK NYLON
5	2	364963-002	RUBBER BUTT PLATE PAD
6	1	366870R	BLACK FELT (NOT SHOWN)
7	1	366870R-61	LOCK BOX FELT (NOT SHOWN)
8	1	365100	MOMENTARY SWITCH
9	*1	36724	LOCK INSERT FOR SHOT GUN
10	1	36M281-01	RACK BASE WELDMENT
11	*1	36M281-02	LOCK MOUNTING BRACKET - PASSENGER
12	*1	36M281-03	LOCK MOUNTING BRACKET - DRIVER
13	4	3630389	TRIM, RUBBER GUNBACK
14	18	3902	1/4" FLAT WASHER, BLACK
15	6	39022	1/4-20 X 1" HHPS, Zn
16	4	39049	5/16-18 X 3/4 BSHCS, BK
17	*4	3906	1/4-20 WHEZ NUT (NOT SHOWN)
18	7	39084	1/4-20x0.75, SHCS, BLACK OXIDE
19	1	39233	85-32 WELD NUT M-D 1114
20	26	39234	1/4-20 SLOT NUT (NOT SHOWN)
21	1	39235	5/16-18 X 5/16 LG. BSHCS, BK
22	1	39242	6-32 X 1-1/2 FLAT HD SOC CAP SCR
23	7	39258	1/4-20x1/2 BUTT HD SOC 6C BLK
24	6	3903	1/4" FLAT WSS WASHER, ZINC
25	1	466870P2	SPACER, PLASTIC, 3/4" LONG
26	*1	466870-01	GNW GAPE
27	1	G6862	TIMER DELAY MODULE
28	1	G6864-MFG	R GUN LOCK
29	1	G6864-K	LOCK
30	1	N8008-TH	MAGNET 1/2" X 1/2" X 1/4"

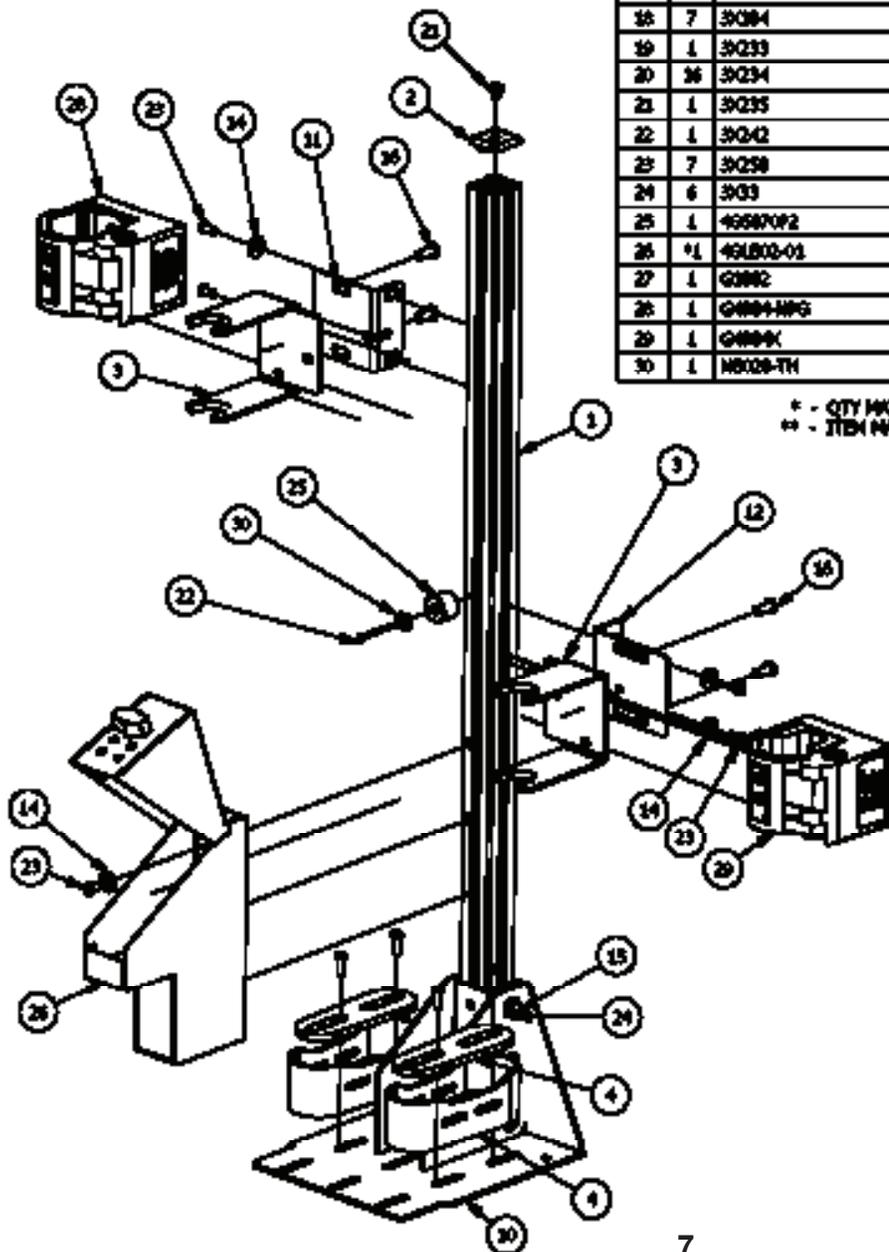

* - QTY MAY VARY DEPENDING ON CONFIGURATION
 ** - ITEM MAY VARY DEPENDING ON CONFIGURATION