

INSTALLATION GUIDE

PB57T15

PUSH BUMPER

2015 - 2016


CHEVROLET TAHOE

Pro-gard[™]
PRODUCTS LLC.


STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD PUSH BUMPER



4PBK5715
HARDWARE KIT

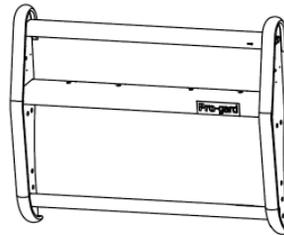

4PBT110
UNIVERSAL SUV PUSH BUMPER

I. Refer to the diagram on last page to verify all parts were received.

II. The following tools will be required to complete the installation:

9/16" socket

7mm socket

3/4" wrench

3/4" socket

10mm socket

Utility knife

III. Read all instructions carefully before starting the assembly process.

NOTE: *Locate all wiring, fuel lines, brake lines, and /or cooling lines before drilling holes or installing any fasteners.*

IV. Front Fascia Removal

A. Remove the OEM tow hooks from the vehicle (if so equipped).

B. Under hood, pry 10 plastic retainers from plastic radiator top cover and remove.


C. Remove the five 7mm bolts located on each side of the bumper fascia, inside the front fenderwell. Note that the topmost fastener faces down.

D. Locate and remove the eight 10mm bolts fastening the underside of the bumper fascia.

E. Remove eight 10mm bolts attaching top of grill to core support.

F. Disconnect attached wiring & carefully remove the fascia and grill (together) from the vehicle.

Figure: 1 3PB5715-01D

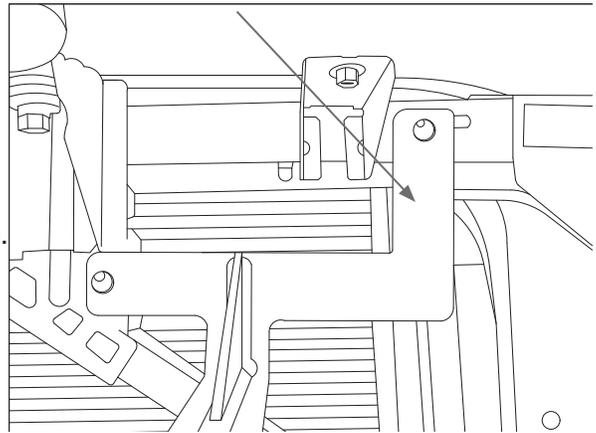


V. Push Bumper Bracket Installation


A. Remove the (4) 10mm bolts holding the upper portion of the radiator core support cover, Place bracket 3PB5715-01D against the driver side core support, aligning the holes located in the upper portion of the core support and just below the hood release (figure 1). Secure using the OEM 10mm bolt. Insert the provided 3X03 bolt and 3X12 washer through the bracket, secure with 3X16 to the opposite side of the slot located below the hood release.

B. Repeat process for the opposite side of the vehicle using 3PB5715-01P.

C. Using a utility knife, cut relief for the upper mounting brackets in the locations shown in figure 2.

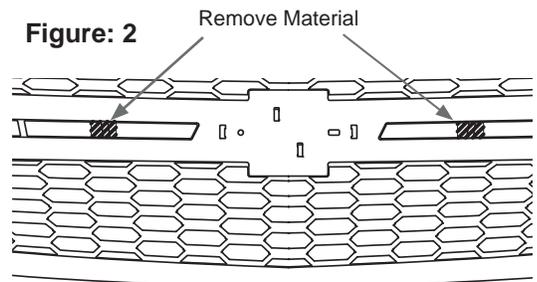

D. If vehicle is not equipped with OEM tow hooks, the trim will need to be modified as shown in figure 3. 1.5 inches of trim should be removed from the center of the trim outward on both sides.

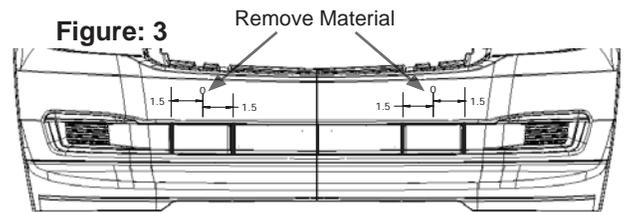

E. Repeat trim modification for opposite side of vehicle.

F. Insert the lower mounting bracket (3PB5715-02D) into the driver's side tow hook opening. Secure from underneath the vehicle using the provided 3X131 bolt and 3X224 washer. Secure both sides of the bracket to the frame rail using the 3X131 bolts and 3X121 washers.

G. Repeat step E for the opposite side of the vehicle using 3PB5715-02P.

VI. Push Bumper Installation

A. Carefully align the top two holes located on each side of the lower portion of the push bumper (4PBT110) with both mounting brackets (3PBK5715-02P & D). Secure the push bumper to the brackets using the provided 3X174 bolts, 3X175 lock washers, and 3X176 nuts. Leave hardware loose to complete the rest of the install.

B. With the lower half of the push bumper loosely in place, insert bracket 3PBK5715-01P into the corresponding slot located on the push bumper. Secure with the provided 3X174 bolt, 3X175 lock washer, and 3X176 nut. Repeat process for driver's side using bracket 3PBK5715-01D.

C. Tighten all fasteners and ensure push bumper is securely mounted to the vehicle.

VII. Installation Complete

4PBK5714 PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3PB5715-01D	UPPER MOUNTING BRACKET DRIVERS SIDE
2	1	3PB5715-01P	UPPER MOUNTING BRACKET PASSENGER SIDE
3	1	3PB5715-02D	LOWER MOUNTING BRACKET
4	1	3PB5715-02P	LOWER MOUNTING BRACKET
5	1	4TPB1110	SUV PUSH BUMPER
4PBHK5715 PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
6	6	3X174	1/2-13 x 1" HHCS, GR8, BIK Zn/C
7	6	3X175	1/2" WSHR Split Lock, BIK Zn/C
8	6	3X176	1/2-13 NUT, GR8, BIK Zn/C
11	2	3X224	3/8 x 1 1/2 Washer
12	4	3X121	3/8 FLAT WSHR, YZ
16	2	3X03	1/4-20 X 5/8 PHIL TRUSS HD MS
17	2	3X12	1/4 FLAT WASHER, BLACK
18	2	3X16	1/4-20 WHIZ NUT
19	6	3X131	3/8-16 x 1.00" HEX HD YELLOW ZINC

