

**INSTALLATION GUIDE**  
**4WK5715T A OR R WINGS**  
**2015 - 2020 CHEVY TAHOE**

**Pro-gard**<sup>™</sup>  
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

**pro-gard.com**  
**800.480.6680**

THESE COMPONENTS ARE REQUIRED  
TO INSTALL THE PARTITION



4WK5715T-A or 4WK5715T-R

**I. The following tools will be required to complete the installation.**

A. 7/16" Socket & Ratchet

**II. Use the diagram to correctly assemble and install the air bag wings.**

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3W5715A-P	PASSENGER WING
2	1	3W5715A-D	DRIVER WING

WING KIT LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
3	6	3P928	MOUNTING BRACKET, A.B WING (Z-BRACKET)
4	12	3X16Z	1/4-20 WHIZ NUT



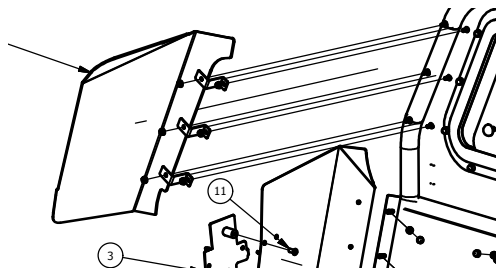


fig. 1 Airbag Wing Install

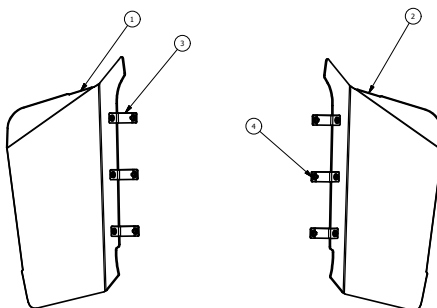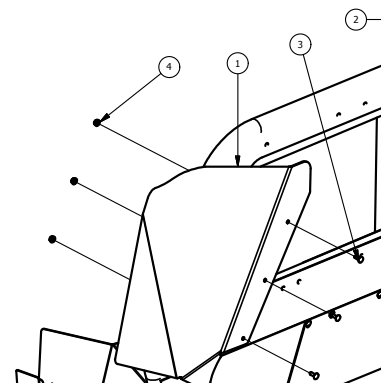

RIGID WING KIT			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3W5715-R-D	DRIVERSIDE RIGID WING
2	1	3W5715-R-P	PASSENGERSIDE RIGID WING
3	6	3X61	1/4-20 X 3/4 CARRIAGE BOLT
4	6	3X16Z	1/4-20 WHIZ NUT

fig. 2 Rigid Wing Install

Step 1. Assemble the passenger and driver side air bag wings by following the diagram.

Step 2. Install air bag or rigid wings on the Pro-gard partition as shown in the diagrams.

**Installation complete!**

If you have any problems with this installation than call the toll free number (800-480-6680) and ask for technical assistance.