


INSTALLATION GUIDE
BALLISTIC DOOR PANEL
'06 CHEVROLET IMPALA

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD BALLISTIC DOOR PANEL SYSTEM

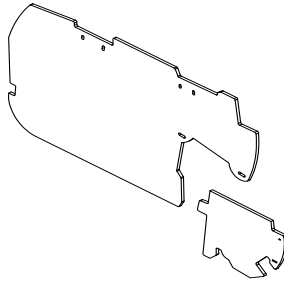

BDP52I06P/D BALLISTIC DOOR PANEL

- I. Refer to the diagram on the last page of these instructions to verify all parts were received.
- II. The following tools will be required to complete the installation.

Door clip Removal Tool
Hex Key (4mm)
- III. Remove Inner Door Panel per Manufacturer's Instructions
- IV. Remove Outside Window Seal
 - A. Remove the retaining screw.
 - B. Lift window seal off to remove.
- V. Install Large Ballistic Panel
 - A. Move the window all the way up.
 - B. Remove the two screws securing the air bag sensor bracket to the door.
 - C. With the window at its up position install the Large Ballistic Door Panel into the window slot. Position the door panel at a 60 degree angle with the small notch facing forward and rotate it so it sits straight in the door.
 - D. Secure the Large Ballistic Door Panel by inserting two each M6 Screws, 2 each M6 flat Washers through the Ballistic Panel slots into the air bag sensor bracket holes, and tighten to secure.
- VI. Install Small Ballistic Panel
 - A. Lay Inner Door Panel finished-side down on a clean surface or cloth.
 - B. Remove foam and discard.

B. Remove foam and discard.


C. Place Small Ballistic Door Panel into space where foam was, then secure with clip.

VII. Replace Outside Window Seal

A. Replace the Outside Window Seal and secure with the screw removed earlier.

VIII. Replace Inner Door Panel per Manufacturer's Instructions

IX. Installation is now complete.

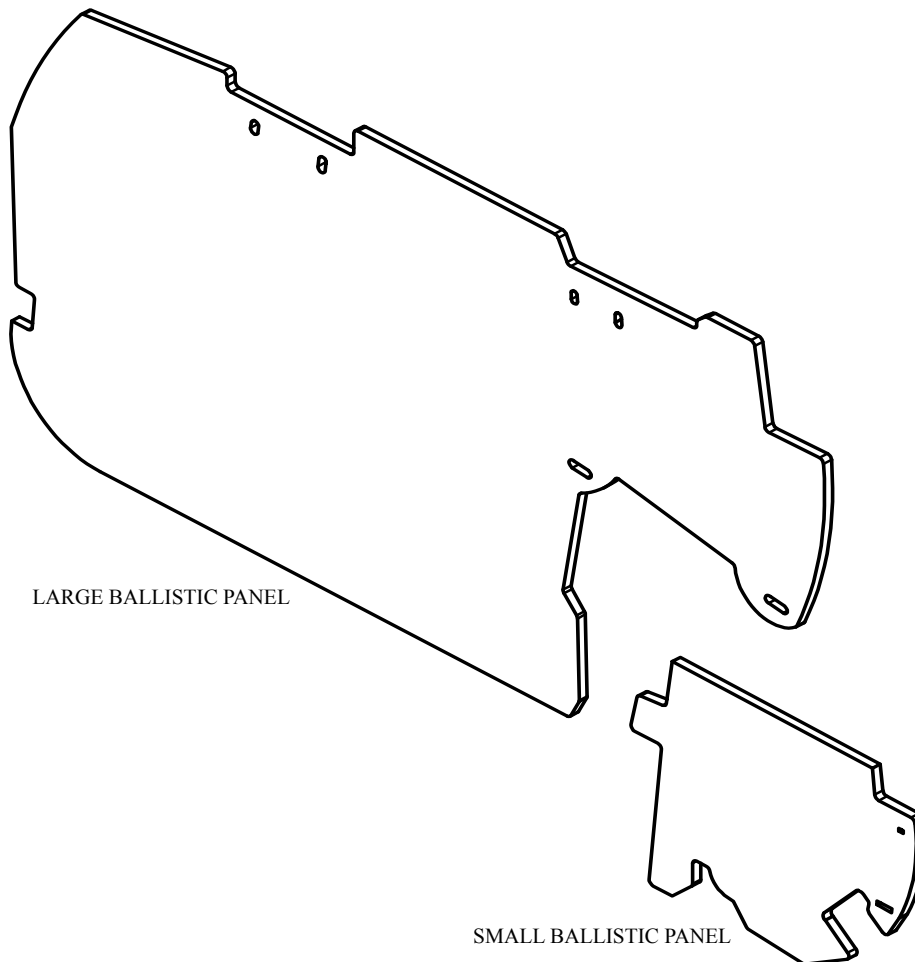

| ITEM NO. | DRAWING NUMBER | DESCRIPTION | MATERIAL | QTY. |
|----------|-----------------|--|---------------|------|
| 1 | -9-00002246 | BAG, 9 X 12, 4 MIL, RECLOSABLE | POLYETHYLENE | 1 |
| 2 | -9-00003612 | LABEL, 2.75 X 1.25 | PAPER, WHITE | 2 |
| 3 | -9-00003676 | BAG, 2 X 3, 2 MIL, RECLOSABLE | POLYETHYLENE | 1 |
| 4 | -9-00003685 | PACKING TAPE, 2" X 2.0 MIL, CLEAR | POLYPROPYLENE | 9 ft |
| 5 | -9-00003738 | M6 FLAT WASHER (6.4mm/12mm/1.6mm) | 18-8 SST | 2 |
| 6 | -9-00003741 | M6 - 1.0 X 40 BSHCS | 18-8 SST | 2 |
| 7 | -9-00003756 | BOX, FFF, 40 X 30 X 4, C. SINGLE, KRAFT, 200#, GLUE | CARDBOARD | 1 |
| 8 | 5502-100-004906 | Lightweight Ballistic Door Panel Label 2 X 1.25 | SEE NOTES | 1 |
| 9 | 5504-100-004846 | LARGE IMPALA UNIVERSAL DOOR PANEL (2006 - CURRENT) | SEE NOTE | 1 |
| 10 | 5504-100-004865 | SMALL IMPALA UNIVERSAL DOOR PANEL (2006 - CURRENT) | SEE NOTE | 1 |
| 11 | 5504-100-004947 | FRONT BALLISTIC DOOR PANEL KIT IMPALA (2006 - CURRENT) INSTALLATION MANUAL | PAPER, WHITE | 1 |

