

INSTALLATION GUIDE


**2015 - 2020 CHEVY TAHOE
FULL CAGE (1826) PRO-CELL
P1826T15**

Pro-gard[™]
PRODUCTS LLC.


STRONG | RELIABLE | SECURE

**pro-gard.com
800.480.6680**

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PARTITION

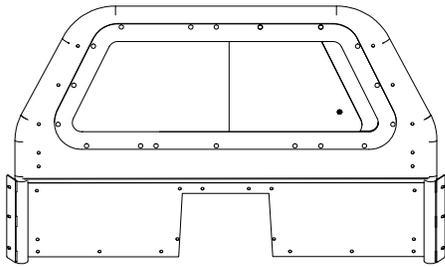


4P5726T15 Partition



4PK5715




4WK5715TA

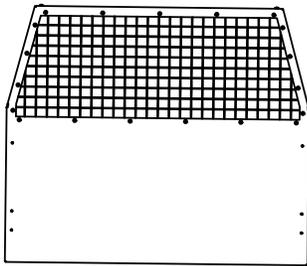

4B57XXT15 Barrier




4BK5715

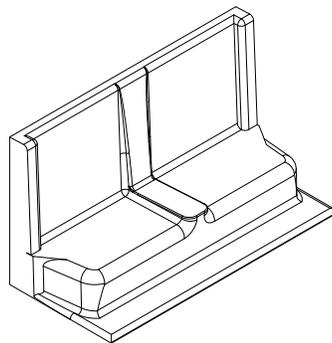

3S5715 Seat



4S57T15

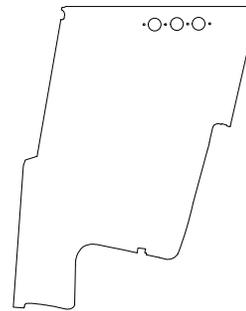


3P5715SS Divider



4K1857T15

WBXXX57T15 Driver & Passenger Window Bars

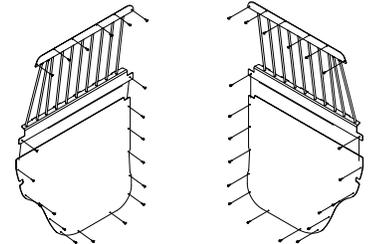

DP57T15 Driver & Passenger Door Panels

I. The following tools will be required to complete the installation.

- A. 7/16" Socket & Ratchet
- B. 7/16" Open Ended Wrench
- C. 5/16" Drill Bit
- D. Drill

II. Read all instructions carefully and refer to pages 5 & 6 to ensure all parts were received.

WARNING: *Locate All wiring, fuel lines, brake lines, coolant lines, or reffridgerant lines before drilling any holes or installing any self-drilling fasteners.*

Fig. 1

III. Location of Instructions.

NOTE: All instructions are located in the individual kit packaging. To locate partition installation instructions, open the partition kit package. To locate the seat installation instructions, open the seat kit package. If any instructions are not found, then please visit the www.pro-gard.com website to download a PDF instruction.

IV. Divider Installation.




A. After the partition, seat, and barrier have been installed, then the divider should be placed inside the vehicle's side doors and centered. Once the divider is placed in location, then use the (3P214) and (3G620) mounting brackets to mark the seat and recess panel for drill hole locations. The location of the brackets can be seen on fig. 1 and fig. 2. It is not necessary to get brackets exact, just centered.

B. Remove the divider and seat from the vehicle. Drill the marked holes in the seat and attach the (3P214) brackets to the seat by placing (3X16Z) whiz nuts on the back side and (3X82) bolt on the top side. (fig. 2) Center and tighten these bolts into place as there will be no access after seat has been installed. Install the bracket onto the recess panel at this time. (fig. 1)

C. Reinstall the seat per the seat instructions. Be sure the OEM seat belt buckles are reinstalled and tighten before reinstalling the divider. Install the vent plate onto the divider by using the (3X07) 1/4-20 screws, (4G5070P1) spacers, (3X16) whiz nuts, and the (3P8010) vent plate as shown in the diagram. (fig. 3)

D. Place the divider back into the vehicle through the passenger side and align divider to the brackets on the recess panel and seat. Install the (3G620) upper mounting brackets onto the existing partition and barrier mounting holes as shown in fig. 1 and fig. 4.

E. Now it is necessary to check the position of the divider and place in final location. Drill 5/16" holes through the mounting brackets and divider. Place (3X82) fasteners through the holes in the divider and secure with (3X16Z) whiz nuts. Check general fit and tighten all other nuts.

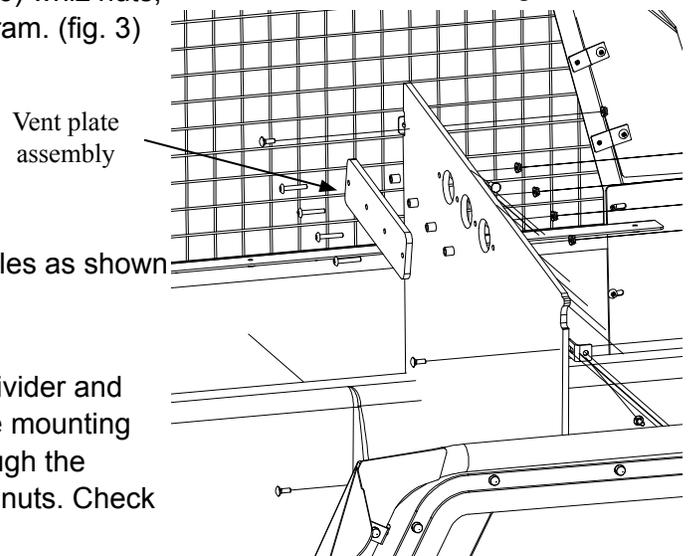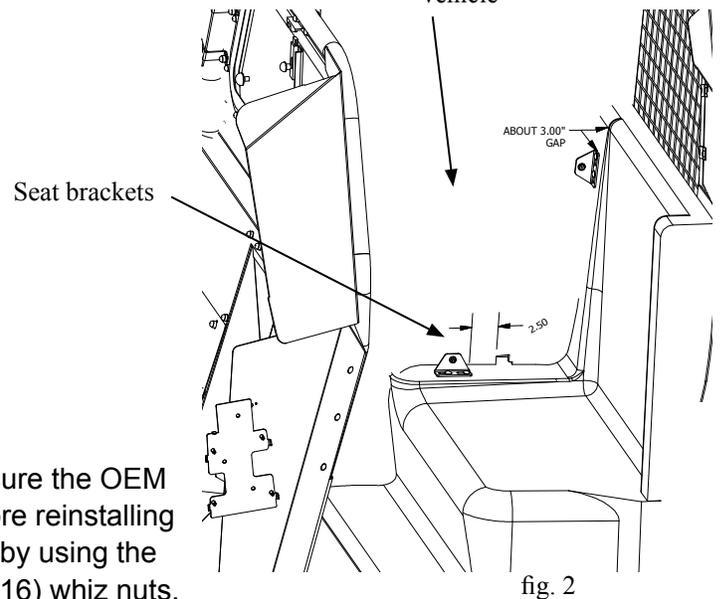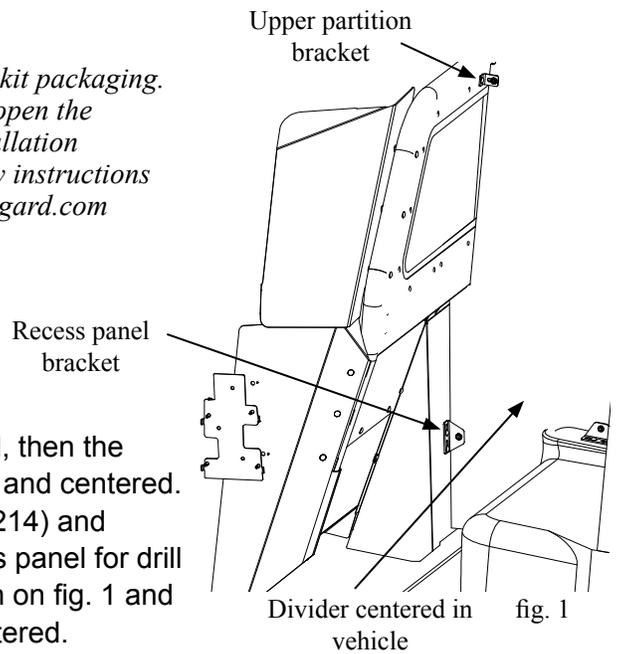

Barrier upper
bracket installs into
the existing barrier
hole using (3X82)
bolt

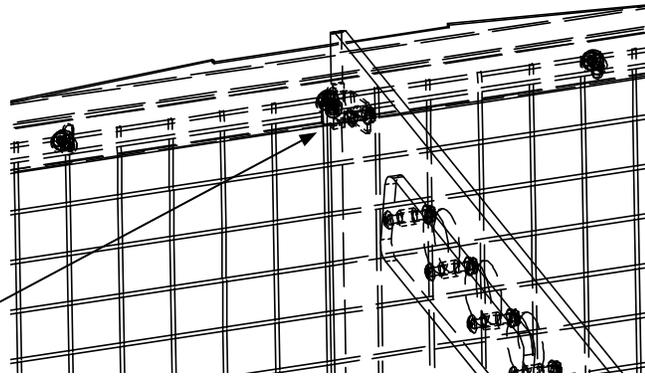


fig. 4

Installation complete!

If you have any problems with this installation then call the toll free number (800-480-6680) and ask for technical assistance.

1826 Pro-Cell Diagram

PRO-CELL PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	4P5726T15	2015 TAHOE PARTITION
2	1	4PK5715	PARTITION KIT
3	1	3SP57BST15-D	DRIVER BUCKET SEAT PROTECTOR
4	1	3SP57BST15-P	PASSENGER BUCKET SEAT PROTECTOR
5	1	4SPHKBS	SEAT PROTECTOR KIT
6	1	3RP5715	RECESS PANEL
7	1	3S5715	2015 TAHOE SEAT
8	1	4S57T15	SEAT KIT
9	1	4WK5715TA	AIR BAG WING KIT
10	1	4B5702T15	2015 TAHOE BARRIER
11	1	4BK5715	BARRIER KIT
12	1	3P5715SS	FULL CAGE PRO-CELL DIVIDER
13	1	WBXXX57T15	WINDOW BARS (DRIVER & PASSENGER)
14	1	DP5715	DOOR PANELS (DRIVER & PASSENGER)

DIVIDER HARDWARE KIT			
ITEM	QTY	PART NUMBER	DESCRIPTION
15	3	3P214	DIVIDER MOUNTING BRACKET, LOWER
16	2	3G620	DIVIDER MOUNTING BRACKET, UPPER
17	1	3P8010	DIVIDER VENT PLATE
18	13	3X82	1/4-20 X 1 CARRIAGE BOLT
19	12	3X16Z	1/4-20 WHIZ NUT
20	4	4G5070P1	SPACER, DIVIDER VENT PLATE
21	4	3X07	1/4-20 X 1-1/2 PHIL TRUSS HD MS
22	4	3X16	1/4-20 WHIZ NUT
23	12	3X145	BLACK PLASTIC CAP

