INSTALLATION GUIDE


TO47UINT13
TRUNK ORGANIZER
2013 - 2019
FORD INTERCEPTOR
UTILITY



STRONG | RELIABLE | SECURE

THESE COMPONENTS ARE REQUIRED TO INSTALL THE PRO-GARD TRUNK ORGANIZER INTO A CHEVY CAPRICE







TRUNK ORGANIZER


LOAD FLOOR

LOWER FLOOR

- I. Refer to the diagram on the last page of these instructions to verify all parts were received.
- II. The following tools will be required to complete the installation.


Utility Knife


- III. Removing OEM Load Floor
 - A. Remove the existing OEM Load Floor at the hinge point.
- IV. Removing Spare Tire, Tool Carrier and OEM Foam
 - A. Remove the hold down nut securing the spare Tire and Remove the Spare Tire.
 - B. Remove the Stud that is holding down the Styrofoam tool kit and remove from spare tire well.

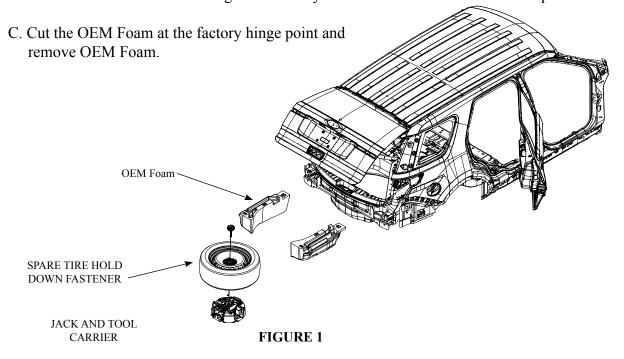

V. Installing Trunk Organizer


A. Set Trunk Organizer into spare tire well.



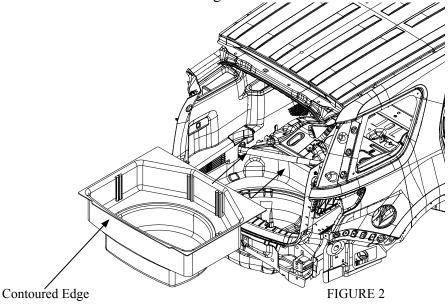

VI. Installing Lower Floor, Dividers, and Load Floor

- A. The Lower Floor will sit on the lip down inside in the Trunk Organizer. It is not intended to be secured down to the Trunk Organizer. The portion with the hole is to be oriented to face the rear of the vehicle. This allows the lower lid to be hinged upward after the upper lid is open to allow access to the contents in the very bottom of the organizer.
- A. The Dividers will sit in the grooves found at the top half of the Trunk Organizer. The longer divider will mount in the slot that is oriented from side to side in the vehicle. The slots will face upward. (See Fig. 3)
- B. The shorter dividers will mount in the slot that is oriented from front to rear in the vehicle. The slots will face downward, interlocking with the long divider.
- C. Place the new load floor into the existing slots for the OEM Load Floor
- VII. Installation of the Trunk Organizer is now complete.

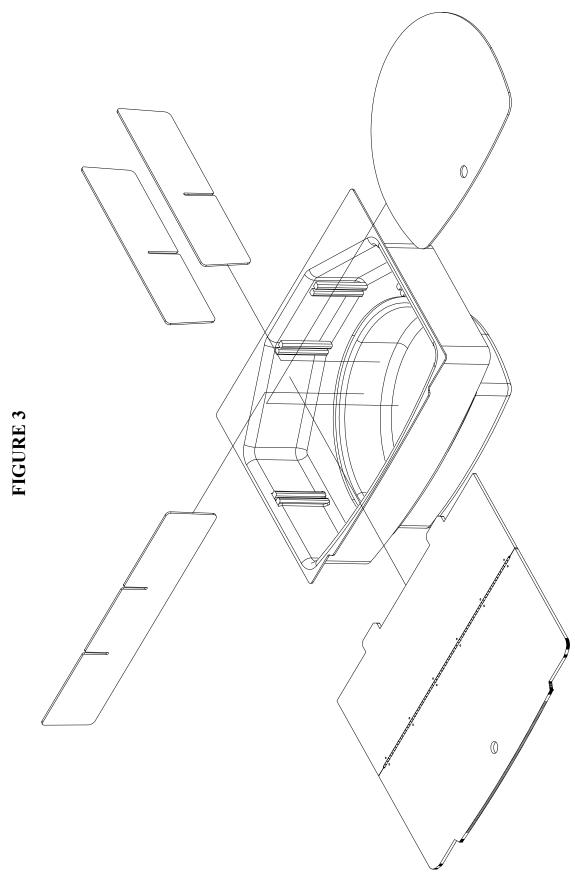

pro-gard.com 800.480.6680