

## **INSTALLATION GUIDE**

**TO53CC11**

**TRUNK ORGANIZER**

**2011 - CURRENT**


**CHEVY CAPRICE**

**Pro-gard**<sup>™</sup>  
PRODUCTS LLC.

**STRONG | RELIABLE | SECURE**

**pro-gard.com**  
**800.480.6680**

THESE COMPONENTS ARE REQUIRED  
TO INSTALL THE PRO-GARD TRUNK ORGANIZER INTO A CHEVY CAPRICE

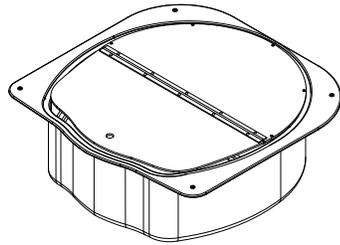

TRUNK ORGANIZER



HARDWARE KIT

I. Refer to the diagram on the last page of these instructions to verify all parts were received.

II. The following tools will be required to complete the installation.

Phillips head screw driver, or drill with Phillips head bit  
Utility Knife

III. Removing trunk liner/carpet

A. Remove the existing trunk liner carpet along with optional rubber trunk liner if so equipped.

IV. Removing Spare Tire and Tool Carrier

A. Remove the hold down nut securing the spare Tire and Remove the Spare Tire.

B. Remove the Stud that is holding down the Styrofoam tool kit and remove from spare tire well.

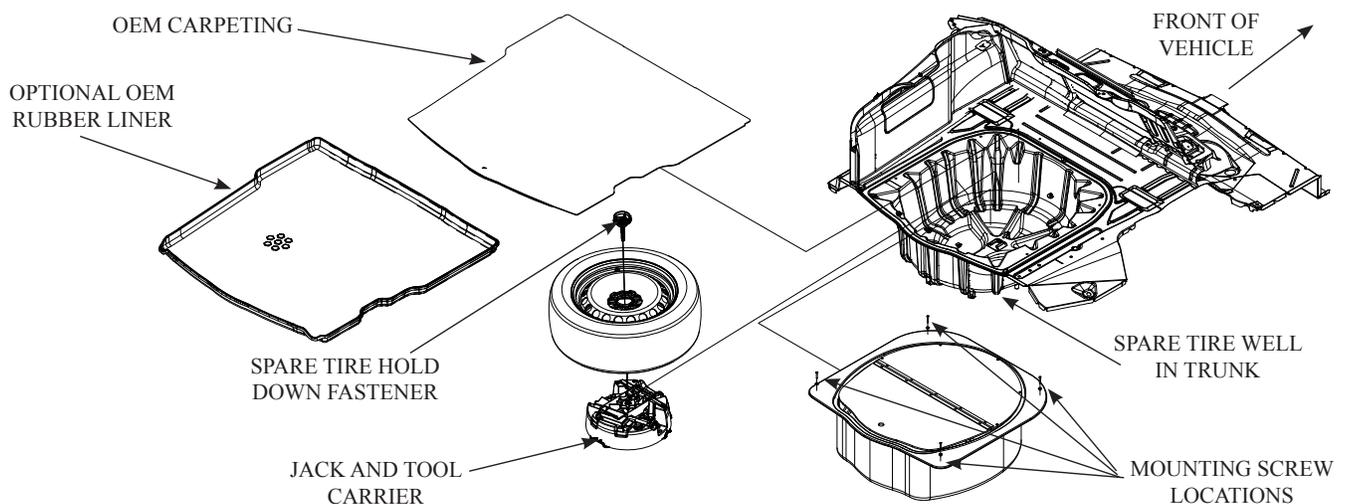



FIGURE 1

V. Cutting Trunk lining carpet to allow for installation of Trunk Organizer (If desired)

A. Remove glued on soft sound deadener from bottom of spare tire lid and cut the carpeted trunk liner 1 inch in from the outside edge of the rigid grey plastic spare tire well cover portion. (See Fig. 2) The idea is to cut away the rigid portion of the spare tire lid and leave the carpet to go around the trunk organizer.

B. If desired the optional rubber trunk liner may also be cut. Use the already cut carpet as a template.

C. Re-install carpet and optional rubber mat into vehicle and align cut out portion with spare tire well.

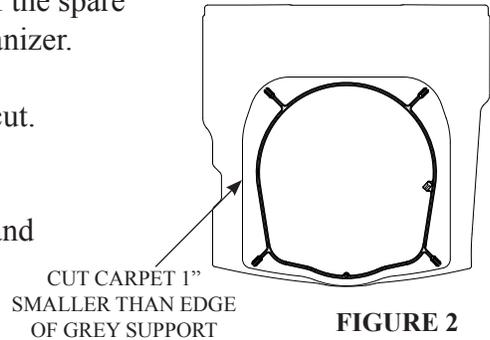

VI. Installing Trunk Organizer

A. Set Trunk Organizer into spare tire well and adjust carpet for desired fit and appearance.

B. Install four Screws (3X77) and Finish Washers (3X78) through the outer corners of the trunk organizer. The screws should fasten the organizer to the black plastic spare tire well.

The screws locations are roughly 1 1/2" inches in from each edge at the corners.

(See Figure 1 for screw locations and organizer orientation)

VII. Installing Lower Shelf and Dividers

A. The Dividers will sit in the grooves found at the bottom of the Trunk Organizer. The shorter divider will mount in the slot that is oriented from left to right in the vehicle. (See Fig. 3)


B. The longer divider will mount in the slot that is oriented from front to rear in the vehicle. The notch on the top should go towards the rear of the vehicle. This notch is to allow access through the finger hole of the shelf.

C. The hinged lower shelf will sit on the lip inside the Trunk Organizer. It is not intended to be secured down to the Trunk Organizer. The portion with the hole is to be oriented to face the rear of the vehicle. This allows the lower lid to be hinged upward after the upper lid is open to allow access to the contents in the very bottom of the organizer.

NOTE: If desired the divider that extends from left to right may be removed/left out to allow access to all contents of lower portion of organizer without removing the lower lid.

IX. Installation of the Trunk Organizer is now complete.

**FIGURE 3**

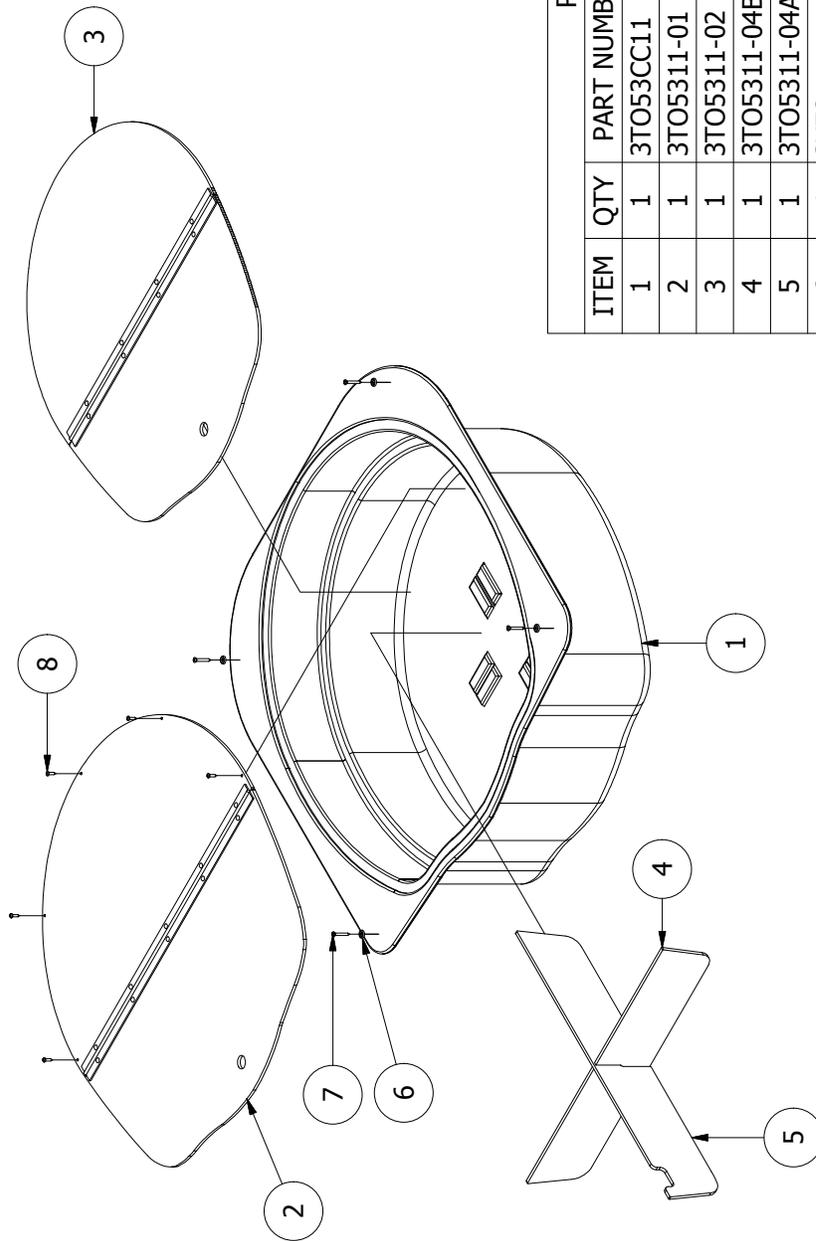

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3TO53CC11	CAPRICE TRUNK ORGANIZER
2	1	3TO5311-01	UPPER LID (LARGER)
3	1	3TO5311-02	LOWER SHELF (SMALLER)
4	1	3TO5311-04B	DIVIDER, SHORT
5	1	3TO5311-04A	DIVIDER, LONG (W/ NOTCH)
6	4	3X78	#10 FINISH WASHER, CHROME
7	4	3X77	#10-12 x 1-1/2" OVAL HEAD PHILIPS SHT MTL SCREW
8	5	3X72	#8 PHILIPS TRUSS HEAD SCREW, BLACK