


INSTALLATION GUIDE

**2020 - CURRENT
FORD POLICE INTERCEPTOR UTILITY
OEM STEEL WINDOW BARS
WB47NPUINT20**

Pro-gardTM
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

**THESE COMPONENTS ARE REQUIRED
TO INSTALL THE STEEL WINDOW BARS**

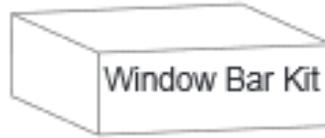

WB47NPUINT20

I. The following tools will be required to complete the installation

- A. Phillips Head Screwdriver
- B. Drill with 3/32" Drill Bit

II. Read all instructions and refer to last page to ensure all parts were received

III. Window Bar Installation Instructions

- A. Open the passenger and driver side rear doors. Roll down both rear windows for the installation.
- B. Place the window bars into the door frame, insert the lower tabs into the window track area, and press down into place (See Fig. 1).
- C. Once the window bars are fully seated in place, mark the center points of the screw holes in the upper frame.
- D. Use a 3/32" drill bit to drill out the pilot holes for the metal screws. Use the Philips screw driver to install all securing fasteners to the vehicle (do not over-tighten).
- E. Check installation by rolling up the windows and closing the doors to make sure there is no interference.

Installation Complete

If you have any problems with this installation, call (800-480-6680) toll free and ask for technical assistance.

Squeeze in these areas with two fingers to seat bars all the way down.


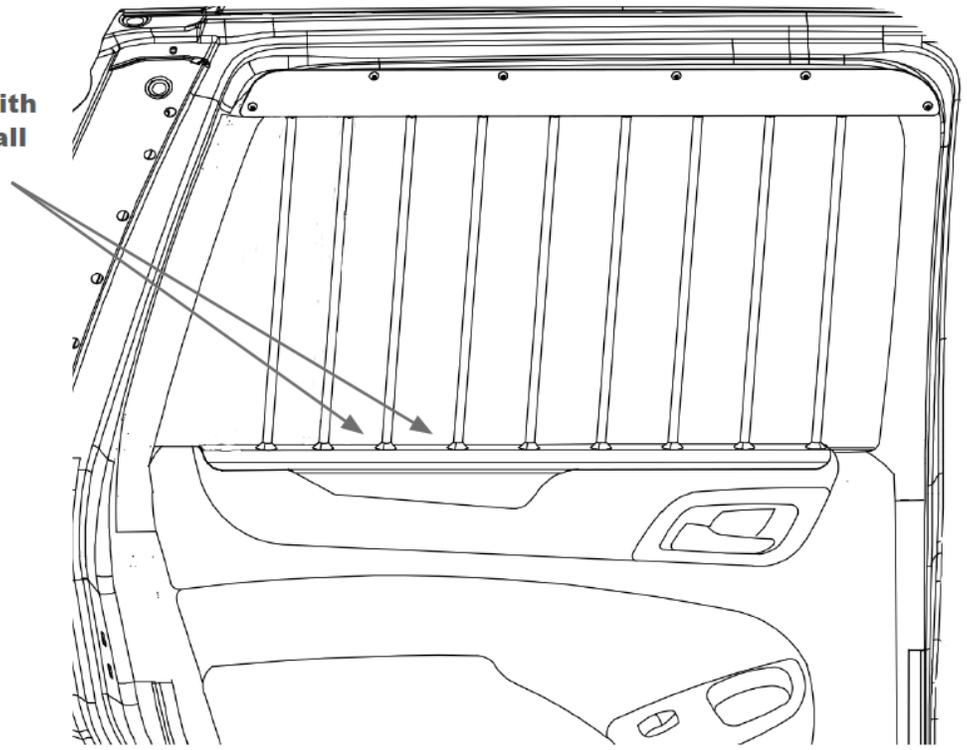


Fig. 1

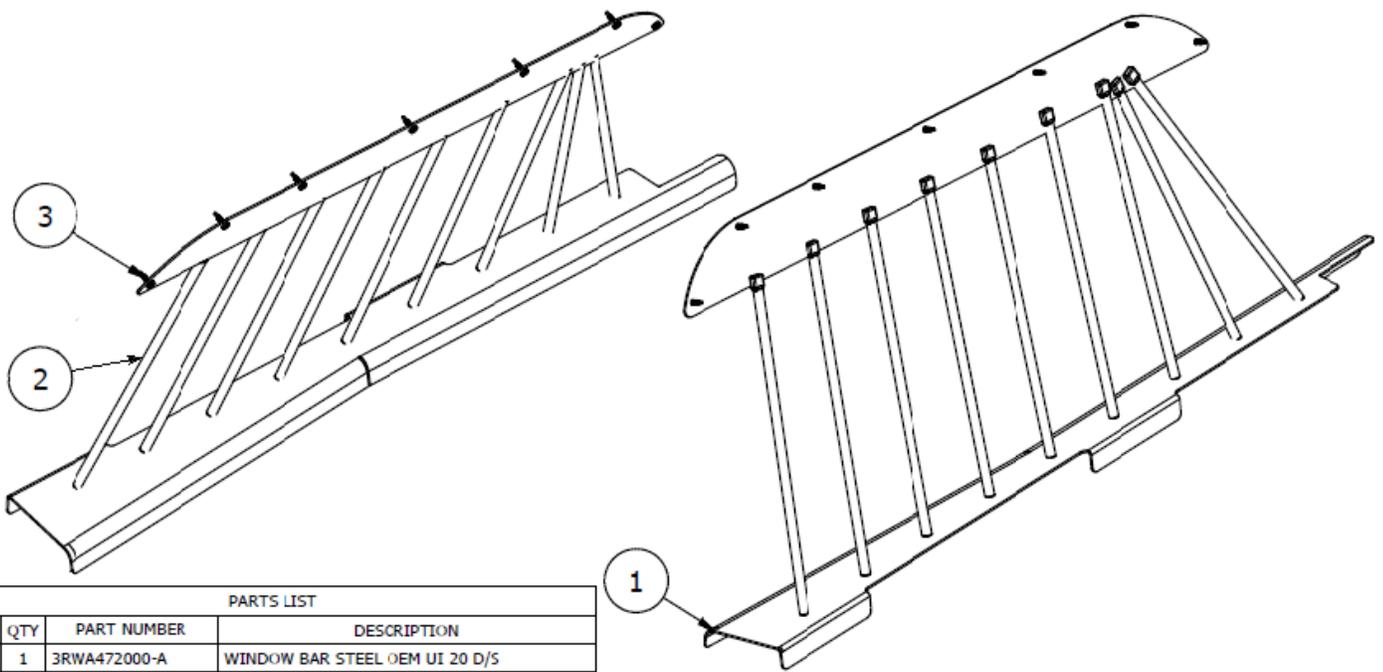

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3RWA472000-A	WINDOW BAR STEEL OEM UI 20 D/S
2	1	3RWA472001-A	WINDOW BAR STEEL OEM UI 20 P/S
3	14	3X72	#8 X 5/8 PHILIPS TRUSS HD