

INSTALLATION GUIDE

WB53NPCC11

STEEL WINDOW ARMOR

11 - CURRENT


CHEVY CAPRICE

Pro-gard[™]
PRODUCTS LLC.


STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD WINDOW ARMOR SYSTEM

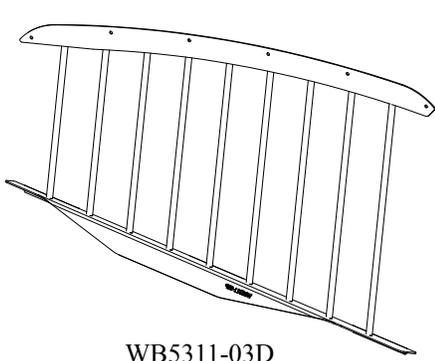

WB5311-03D

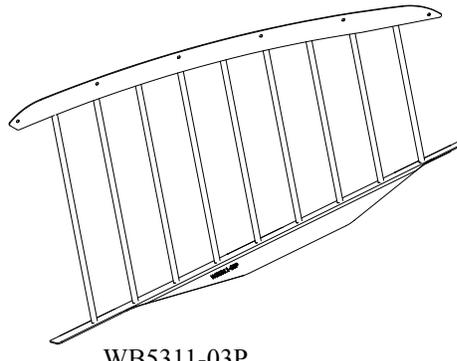

WB5311-03P




HARDWARE KIT

STEEL WINDOW ARMOR ASSEMBLIES

THIS WINDOW ARMOR IS ONLY USED WITH THE OEM DOOR PANEL.
Use #WB5311-04 with Pro-gard ABS door panel.

- I. Refer to the diagrams above to verify all parts were received.
- II. The following tools will be required to complete the installation.
 1. Drill with standard #2 Philips driver
 2. Drill bit 7/64" diameter
- III. Window Armor Installation
 1. From the inside of the door place the Armor into the corresponding window opening with the lower rail resting on the top of the OEM Door Panel. Insure that the rear lip of the lower rail is hooked behind the OEM Door Panel and on top of the rubber window seal (See Fig. 1).
 2. Center the outside of the metal mounting frame on the door front to back.
 3. Install the screws at each side of the upper rail first then work up each side installing the rest of the screws. The supplied screws (3X72) are a Type A-self tapping but sometimes it is necessary to drill a 7/64" pilot hole.

Fig. 1
PASSENGER SIDE SHOWN

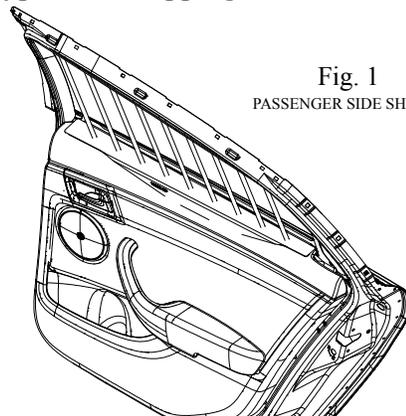

- IV. Installation is now complete.