

INSTALLATION GUIDE

WBP47NPUINT13

POLYCARBONATE WINDOW

BARRIER

2013 - 2019 FORD


INTERCEPTOR UTILITY

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD WINDOW ARMOR SYSTEM

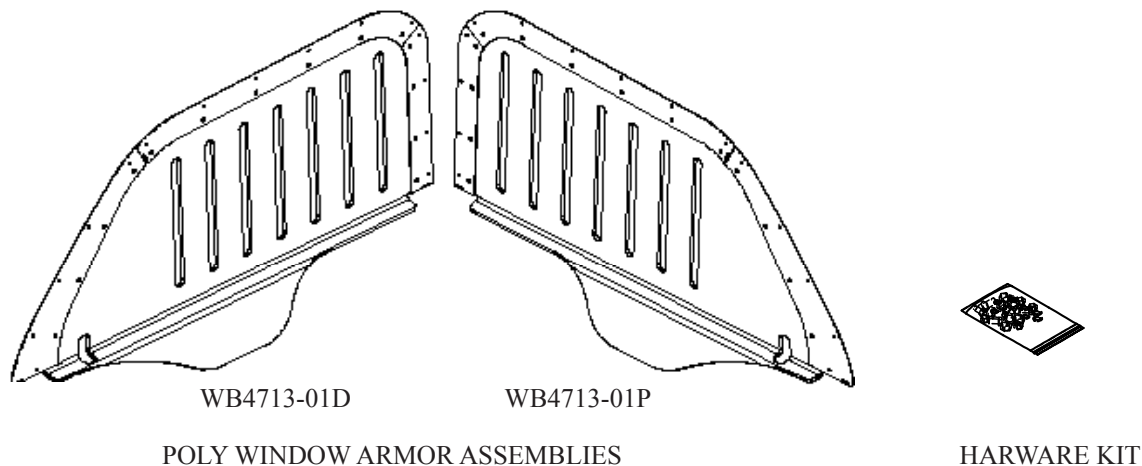

THIS WINDOW BARRIER IS ONLY USED WITH THE OEM DOOR PANEL.
Use #WB4713-02 with Pro-gard ABS door panel.

- I. Refer to the diagrams above to verify all parts were received.
- II. The following tools will be required to complete the installation.
 1. Drill with standard #2 Philips driver
 2. Drill bit 7/64" diameter
- III. Window Armor Installation
 1. From the inside of the door place the Barrier into the corresponding window opening with the lower flange resting on the top of the OEM Door Panel. (See Fig. 1).
 2. Center the outside of the metal mounting frame on the door front to back. Ensure all the holes line up with the steel frame of the door.
 3. Apply pressure to the lower flange and center of the window to force it against the door. This will allow the barrier to be flush with the frame of the door. (It may be necessary to use clamps or have someone help keep pressure against the barrier while screws are being installed) Install the lower screws at each side first then work up each side installing the rest of the screws. The supplied screws are a Type A-self tapping but sometimes it is necessary to drill a 7/64" pilot hole.
- IV. Installation is now complete.

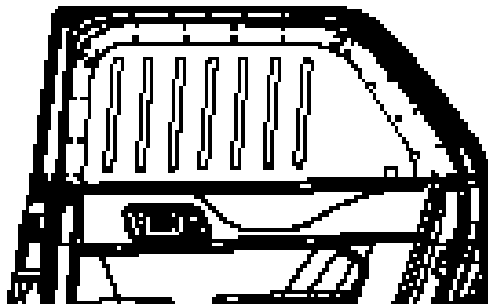


Fig. 1
DRIVER SIDE SHOWN