

INSTALLATION GUIDE

WBP67NPD18

POLYCARBONATE

WINDOW BARRIER

18 - CURRENT


DODGE DURANGO

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD WINDOW ARMOR SYSTEM

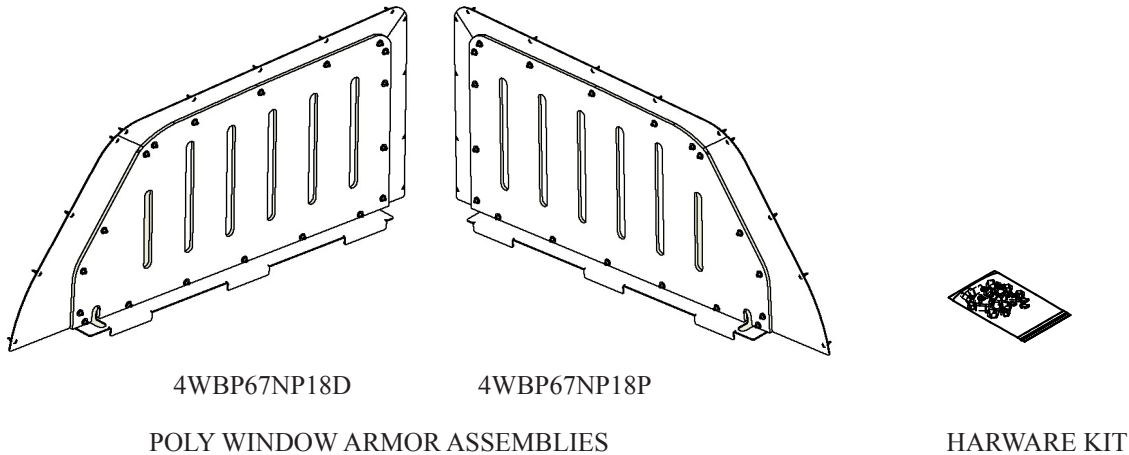

THIS WINDOW BARRIER IS ONLY USED WITH THE OEM DOOR PANEL.

- I. Refer to the diagrams above to verify all parts were received.
- II. The following tools will be required to complete the installation.
 1. Drill with standard #2 Philips driver
 2. Drill bit 7/64" dia
 3. Utility Knife or other cutting instrument
- III. Window Armor Installation
 1. From the inside of the door place the window barrier into the corresponding window opening with the lower flange resting on the top of the OEM Door Panel.
 2. Center the barrier on the window frame front to back and mark the plastic door trim along each side of the window barrier's bottoms. Using a utility knife (or other cutting method), cut the plastic trim away on each side, exposing the top and sides of the window frame. Reapply the barrier, ensuring all the holes line up with the steel frame around the window.
 3. Apply pressure to the lower flange and center of the window to force it against the door. This will allow the barrier to be flush with the frame of the door. (It may be necessary to use clamps or have someone help keep pressure against the barrier while screws are being installed) Install the lower screws at each side first then work up each side installing the rest
- IV. Installation is now complete.