

INSTALLATION GUIDE

SKID PLATE SK56C16

2016 - CURRENT


DODGE CHARGER AWD

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD SKID PLATE SYSTEM

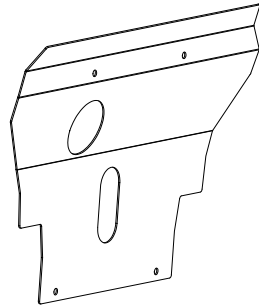

SK56C16 SKID PLATE




HARDWARE KIT

- I. Refer to the diagram on the last page of these instructions to verify all parts were received.
- II. The following tools will be required to complete the installation.
 - A. 3/8" or 1/2" drive ratchet with 10mm and 8mm sockets
- III. Read all instructions carefully before starting the assembly process.

NOTE: *Locate any Wiring, Fuel Lines, Brake Lines, and/or Cooling Lines before drilling holes or installing Fasteners.*

IV. Removing OEM Plastic Debris Shield

- A. Remove the four fasteners holding the OEM Debris Shield to the vehicle underbody. (See Fig. 1)
- B. Remove and discard the Shield as it will not be used in this application. Keep the hardware for use later.

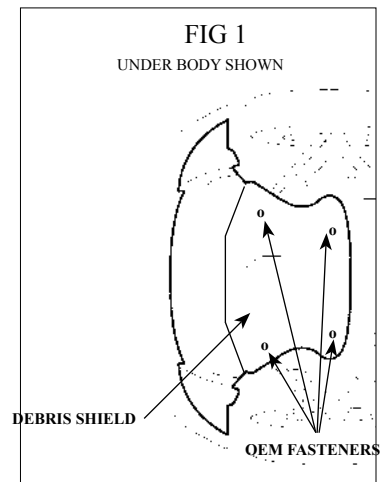


V. Installing the Skid Plate

- A. Orient the Skid Plate (2SK56C16) so that the oil drain slot aligns with the Engine Oil Drain Plug. Using the supplied bolts (3X458) and washers (3X459) attach the Skid Plate to the vehicle utilizing the OEM anchor points from the OEM Debris Shield towards the front of the vehicle, and use the OEM bolts and washer to attach the back portion of the skid plate(See Fig. 2)

B. Ensure all fasteners are tight.

VI. Installation complete.

FIG 2
FRONT OF VEHICLE SHOWN

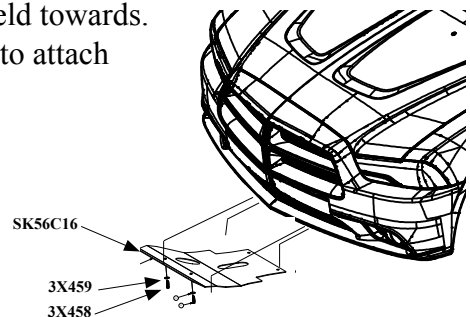

PARTS LIST		
ITEM	QTY	PART NUMBER DESCRIPTION
1	1	2SK56C16-01 AWD DODGE CHARGER SKID PLATE
2	2	3X4-58 MED-STRG ZINC-PLTD STL CAP SCREW - CLASS 8.8
3	2	3X4-59 .25" ID X 1" OD Steel Flat Washer

