

INSTALLATION GUIDE

WBP53CC11

**POLY WINDOW ARMOR AND
ABS DOOR PANEL**

11 - CURRENT


CHEVY CAPRICE

Pro-gard™
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

**pro-gard.com
800.480.6680**

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD STEEL WINDOW ARMOR
STEEL WINDOW ARMOR ASSEMBLIES

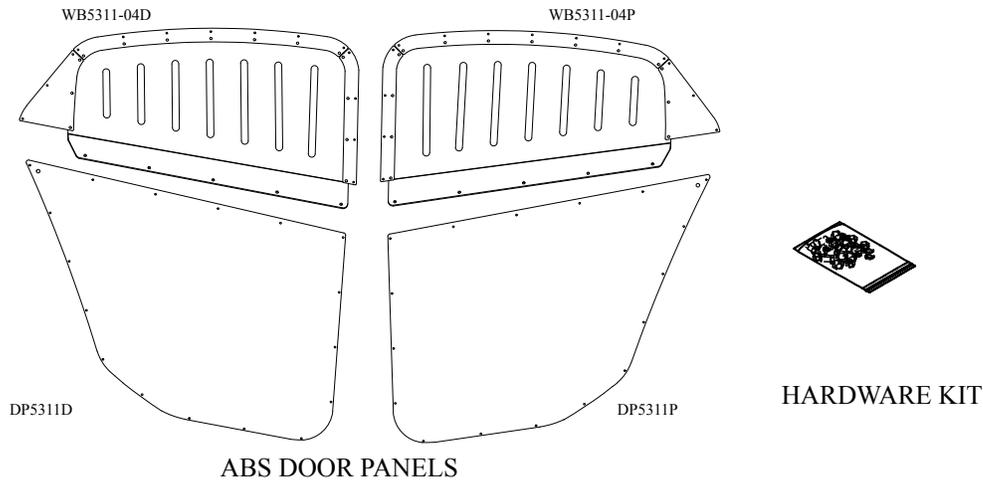

ABS DOOR PANELS
THIS WINDOW ARMOR IS ONLY USED WITH #DP5311 ABS DOOR PANEL.
Use #WB5311-01 with OEM door panel.

I. Refer to the diagram on the last page to verify all parts were received.

II. The following tools will be required to complete the installation.

1. Drill with standard #2 Philips driver
2. Drill bit 7/64" diameter
3. T20 Torx Bit & Bit Driver

III. Read all instructions carefully before starting the assembly process.

NOTE: *Locate all Wiring, Fuel Lines, Brake Lines, and/or Cooling Lines before drilling holes or installing any Fasteners.*


IV. OEM Door Panel Removal

1. Find the cover plates behind both door handles, use a small screwdriver to remove.
2. Remove the Phillips head screw behind the cover plate.
3. Underneath the arm rest toward the rear of the door, there is a small trim piece that snaps into place. Firmly pull out and slightly down to remove this.
4. Behind the small trim piece is a T20 Torx screw that can now be removed.
5. Remove the three screws located at the bottom of the door panel.

6. Remove the OEM door panel from the door frame.
7. Remove the power window switch from the door panel.
8. Secure the door latch cable to the door frame so it will not rattle.
9. Make sure the power window switch is connected to the harness, protect it from moisture and secure the harness inside the door frame away from the windows travel.



V. ABS Door Panel Installation

1. Place the door panel against the door and align the upper locating hole with the tab on the door. Then align and install the lower three screws (3X72) into the existing holes on the bottom of the door.(See Fig. 1&2)
2. Attach the remainder of the door panel with (3X72) #8 x 5/8 self tapping screws (Do not install screws in the 5 holes along the top until window armor has been installed)

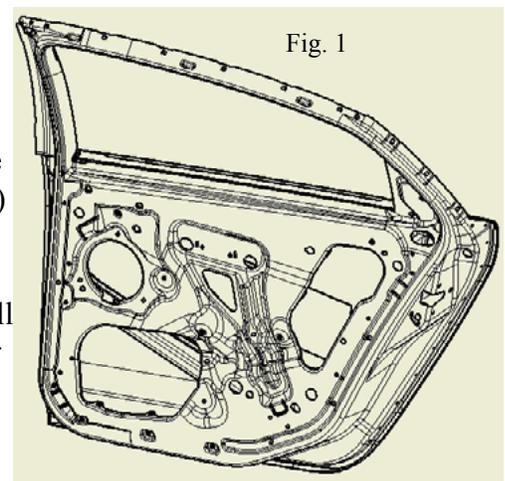





VI. Window Armor Installation

1. Remove the OEM rubber molding from the OEM Door Panel and replace on to the vehicle door window frame if it came off with the door panel. (See Fig. 1)
2. Place the Window Armor against door frame. Center the outside of the metal mounting frame on the door side to side. Firmly push against the window armor to bend it flush against the door frame. It may be necessary to clamp the window armor in place while securing with fasteners. (See Fig. 3)
3. Align the holes in the top rail with the upper door frame. Ensure all holes line up with door frame before securing.
4. Install the center lower screw first then install the remaining lower screws. The supplied screws (3X72) are a Type A-self tapping but sometimes it is necessary to drill a 7/64" pilot hole.

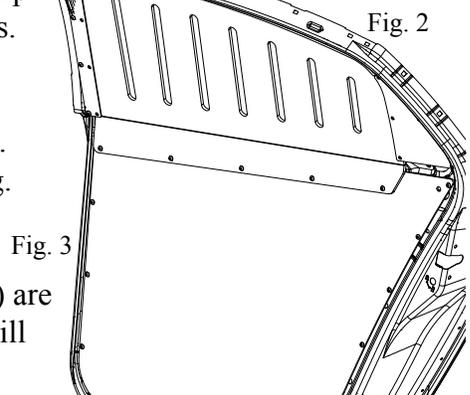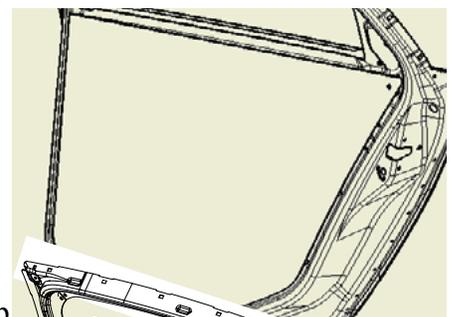

PARTS LIST

ITEM	QTY	PART NUMBER	DESCRIPTION
A	0	NONE	FACTORY DOOR ASSEMBLY
1	2	DP5311	ABS DOOR PANEL (P & D)
2	2	WB5311-04	POLY WINDOW BARRIER (P & D)
3	62	3X72	8-32 X 5/8 PHIL PAN HD MS

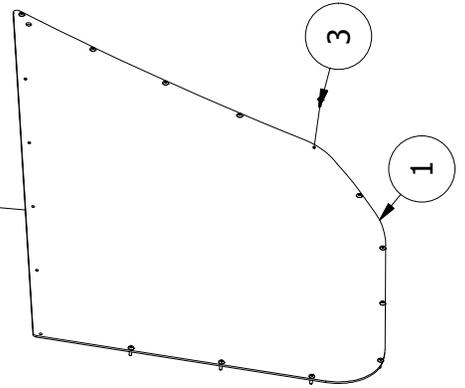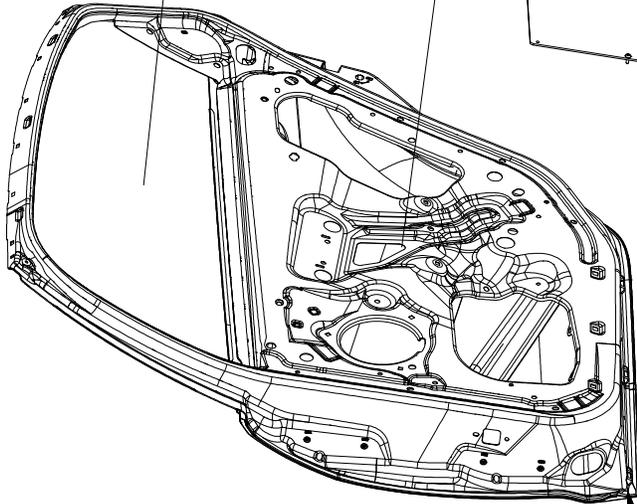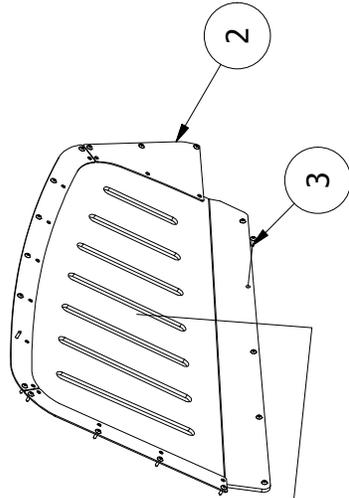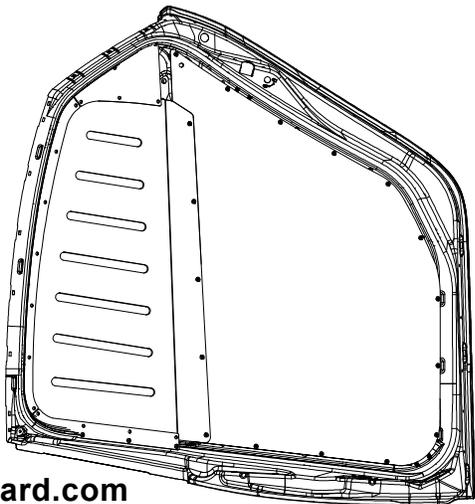

A